Artisan Technology Group

Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment.

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- CONSIGNMENT

SERVICE CENTER REPAIRS
Experienced engineers and technicians on staff at our full-service, in-house repair center

INSTRAVIEW REMOTE INSPECTION
Remotely inspect equipment before purchasing with our interactive website at ***www.instraview.com*** ↗

WE BUY USED EQUIPMENT!
Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins!
www.artisantg.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?
Visit us on the web at ***www.artisantg.com*** ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation!

Contact us: (888) 88-SOURCE | sales@artisantg.com | 101 E. Mercury Drive, Champaign IL 61822

Getting Started with the ARINC 429 PCI2-8/PCI2-16

1: Introduction 1
2: Before You Begin 7
3: Installing the Software 9
4: Installing the Hardware 15
5: Performing System-Specific Installation 21
6: Running Unit Test 27
7: Connecting to A429 Bus 47
8: What to Do Next 49
9: Hardware Specifications 51
10: Card Information 65

SBS Technologies®
2400 Louisiana Boulevard, NE
AFC Building 5, Suite 600
Albuquerque, NM 87110-4316
Sales: 800-SBS-1553 or 505-875-0600
Fax: 505-875-0400
Tech Support: 877-832-4727
Tech Support Email: support.government@sbs.com
Documentation Support Email: govdocs@sbs.com
http://www.sbs.com
http://www.resource.sbs.com

Applies to models:
A429-PCI2-8, A429-PCI2-16

Doc PN: 504-429104-00

SBS Technologies

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

© 2003 SBS Technologies, Incorporated. All rights reserved.

Getting Started with the ARINC 429 PCI2-8/PCI2-16

This document is the intellectual property of SBS Technologies, Inc. (SBS), and contains proprietary and confidential information. Use, disclosure, and reproduction is permitted only under the terms of an SBS software license agreement or explicit written permission of SBS. You are not authorized to use this document or its contents until you have read and agreed to the applicable software license agreement.

THIS DOCUMENT AND ITS CONTENTS ARE PROVIDED AS IS, WITH NO WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF DESIGN, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR ARISING FROM ANY COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

All computer code and software contained in this document is licensed to be used only in connection with an SBS product. Even if this code or software is merged with any other code or software program, it remains subject to the terms and conditions of this license. If you copy, or merge, this code or software, you must reproduce and include all SBS copyright notices and any other proprietary rights notices.

In no event will SBS be liable for any lost revenue or profits or other special, indirect, incidental and consequential damage, even if SBS has been advised of the possibility of such damages, as a result of the usage of this document and the software that this document describes. The entire liability of SBS shall be limited to the amount paid by you for this document and its contents.

SBS shall have no liability with respect to the infringement of copyrights, trade secrets, or any patents by this document of any part thereof. Please see the applicable software license agreement for full disclaimer or warranties and limitations of liability.

RESTRICTED RIGHTS LEGEND

Use, duplication, reproduction, release, performance, display or disclosure by the Government is subject to restrictions set forth in subparagraph (b)(3) of the Rights in Technical Data and Computer Software clause at 48 CFR 252.227-7013.

SBS Technologies, Inc., 2400 Louisiana Blvd. NE #5-600, Albuquerque, NM 87110

This manual, as well as the software described herein, is furnished under license and may only be used or copied in accordance with the terms of such license.

SBS Technologies and the SBS logo are trademarks of SBS Technologies, Inc. All other brand names and product names contained herein are trademarks, registered trademarks, or trade names of their respective holders.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1: Introduction

This chapter introduces the *Getting Started with the A429 PCI2-8/PCI2-16* manual. It describes the contents of this manual, and the terminology and conventions used in this manual. The sections are as follows:

- Contents of Getting Started with the A429 PCI2-8/PCI2-16
- Contents of ARINC User's Manual
- Contents of the Integrated Avionics Library Reference Manual
- Terminology
- Conventions

1.1 Contents of *Getting Started with the A429 PCI2-8/PCI2-16*

This manual applies to the following model numbers (the last digit in the model number indicates the number of channels):

- A429-PCI2-8
- A429-PCI2-16

The ARINC 429 (A429) PCI2-8 and PCI2-16 are single-card, real-time A429 interface module for PC platforms.

This manual is intended to assist you in getting the A429 PCI2-8 and PCI2-16 up and running as quickly as possible. It addresses the following:

- Installing the hardware
- Installing the software
- Configuring the software for your operating system
- Testing
- Basic module operation

This manual assumes that you will be using the Integrated Avionics Library provided by SBS to operate the module.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.2 Contents of *ARINC User's Manual*

The accompanying *ARINC User's Manual* contains complete details on module programming and operation, including the following:

- A429 programming and structures
- SBS Integrated Avionics Library programming functions
- System software provided by SBS

1.3 Contents of the *Integrated Avionics Library Reference Manual*

The *Integrated Avionics Library Reference Manual* provides information on using the included avionics libraries in your own application.

1.4 Terminology

Table 1.4.1 defines some of the basic terms used throughout this manual.

Table 1.4.1: Basic Terminology

Term	Meaning
BM	Bus monitor
Bus	A single ARINC 429 unidirectional transmit or receive channel.
Channel	One unidirectional ARINC 429 bus (synonymous with "Bus").
Device	A logical entity that consists of eight channels and corresponds one-for-one with a device entry in the *sbs_dev.cfg* configuration file.
Firmware	Program running in the SBS digital signal processor(s) that controls all A429 operations. The firmware must be loaded upon device initialization.
Receive Channel	A single unidirectional ARINC 429 receive bus.
Transmit Channel	A single unidirectional ARINC 429 transmit bus.
Word	A 16-bit value; i.e., two bytes.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.5 Conventions

The following conventions appear in this document. These conventions may differ from those used in other SBS publications. The subsections listed below describe each convention in more detail:

- Typographic Conventions
- Words Having Special Meaning
- Compound Keystrokes and Menu Selections
- Symbols

1.5.1 Typographic Conventions

Table 1.5.1 shows the typographic conventions used in this document.

Table 1.5.1: Typographic Conventions

Element	Use in Body Text	Use in Procedures
Italic	➢ Document, chapter, section, and topic titles and cross references. ➢ Emphasis.	➢ Filenames and directory paths.
Bold	➢ (Not used in body text.)	➢ Controls, dialogs, menus, and text or numeric fields that appear on the screen. ➢ Keys on your keyboard.
`Courier Roman`	➢ Code examples.	➢ Simulating the appearance of screens.
`Courier Bold`	➢ Library function calls and syntax. ➢ Emphasizing lines of code.	➢ Commands and other information that you type as given.
Angle brackets, e.g.,< >	➢ Enclosing variable information that you type (without the brackets) in place of a dummy variable.	➢ Enclosing variable information that you type (without the brackets) in place of a dummy variable.

The point size of the text varies depending on whether it is used in body text, code examples, notes, screens, or procedures.

1.5.2 Words Having Special Meaning

In procedures, the words “Enter” (or “enter”) and “Type” (or “type”) have special meanings that are indicated in Table 1.5.2.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1.5.2: Words with Special Meaning

Word	Meaning
Enter	Key in the specified text or variable information and press the **Return** key.
Type	Key in the specified text. Do not press **Return**.

1.5.3 Compound Keystrokes and Menu Selections

Compound Keystrokes

Whenever a procedure instructs you to press multiple keys, a double angle bracket "»" separates the names of the keys. Table 1.5.3 shows an example.

Menu Selections

Whenever a procedure instructs you to select an item from a pull-down menu, a double angle bracket "»" separates the menu items. Table 1.5.3 shows an example.

Table 1.5.3: Examples of Notation for Compound Keystrokes and Menu Selections

Instruction	Meaning
Press **Ctrl** » **Alt** » **Delete**.	Press the **Ctrl**, **Alt**, and **Delete** keys simultaneously.
Select **File** » **Open**.	Select **Open** from the **File** menu.

1.5.4 Symbols

The following symbols appear throughout this manual:

Warning: Paragraphs next to this symbol contain information critical to module operation or to your safety.

Note: Paragraphs next to this symbol contain information important to module operation.

Tip: Paragraphs next to this symbol contain useful tips.

Cross Reference: Paragraphs next to this symbol contain cross references to the *ARINC User's Manual*, the *Integrated Avionics Library Reference Manual* or to a related page in this manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Software Cross Reference: Paragraphs next to this symbol contain cross references to software media included with this product.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2: Before You Begin

The sections in this chapter describe what to do after receiving and prior to installing your card. The sections are as follows:

- What You Should Have Received
- Unpacking the Card
- What You Will Need

2.1 What You Should Have Received

- ARINC 429 PCI2-8 or ARINC 429 PCI2-16 interface module
- Loopback assembly
- SBS Resource CD - Contains PDF versions of this manual, the *ARINC User's Manual,* and the *Integrated Avionics Library Reference Manual*

2.2 Unpacking the Card

Warning: This is an electronic product that is sensitive to electrostatic discharge. Take normal precautions in handling the card to prevent damage.

- Carefully unpack the card and inspect it for physical damage that might have occurred during shipping.
- If you have a damaged card, contact the SBS technical support group that handles maintenance, repairs, and warranties in Albuquerque. When you call us, give us the serial number of your card, and have the card available in case we have questions about its condition.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.3 What You Will Need

The ARINC 429 PCI2-8 or ARINC 429 PCI2-16 product package includes everything required to operate the card on your chassis except for appropriate connectors and wiring to connect to an actual ARINC 429 bus.

Cross Reference: See Subsection 9.1.3 for ordering information and part numbers for these items.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3: Installing the Software

Descriptions of the provided software disks and instructions on software installation are included in the following sections:

- Support Software
- Copying the Software to Your Host System

3.1 Support Software

SBS provides support software for its ARINC 429 products as part of the Integrated Avionics Library on the following media:

- SBS Resource CD

SBS Resource CD

The SBS Resource CD contains the following:

- Integrated Avionics Library, including C library source files, DLLs, sample applications, and the console mode version of the Unit Test executable
- Device drivers necessary to support the interface between the libraries and your computer system
- SBS PASS demo software
- Product documentation in PDF format (requires Adobe Acrobat Reader)
- Firmware file that must be downloaded to the A429 PCI2-8 or A429 PCI2-16 card upon initialization.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2 Copying the Software to Your Host System

Use the following instructions to copy the software to the system in which you are installing the A429 PCI2-8 or A429 PCI2-16 card. Separate sets of instructions for PC systems and for non-PC systems are included in the following two sections:

- Windows Operating Systems
- UNIX-Based Operating Systems

3.2.1 Windows Operating Systems

Unless otherwise specified, the installation batch files will place the Integrated Avionics Library on your system. The *Integrated Avionics Library Reference Manual* provides information on using the library in your own application, and operating system dependent software in the *c:\sbs_ver<x.yz>* folder (directory) in your Windows 95/98/ME/2000 or Windows NT environment, where *<x.yz>* is the version number of the current release.

1. Install the library by completing the following steps:
   - Insert the SBS Resource CD into your CD-ROM drive.
   - Start the Explorer and navigate to the CD.
   - Double-click on the Library folder.
   - Double-click **Setup.exe** from the Explorer.
   - Follow the instructions that appear on the screen.

   If you select all of the defaults, the directory structure shown in Figure 3.2.1 is created.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

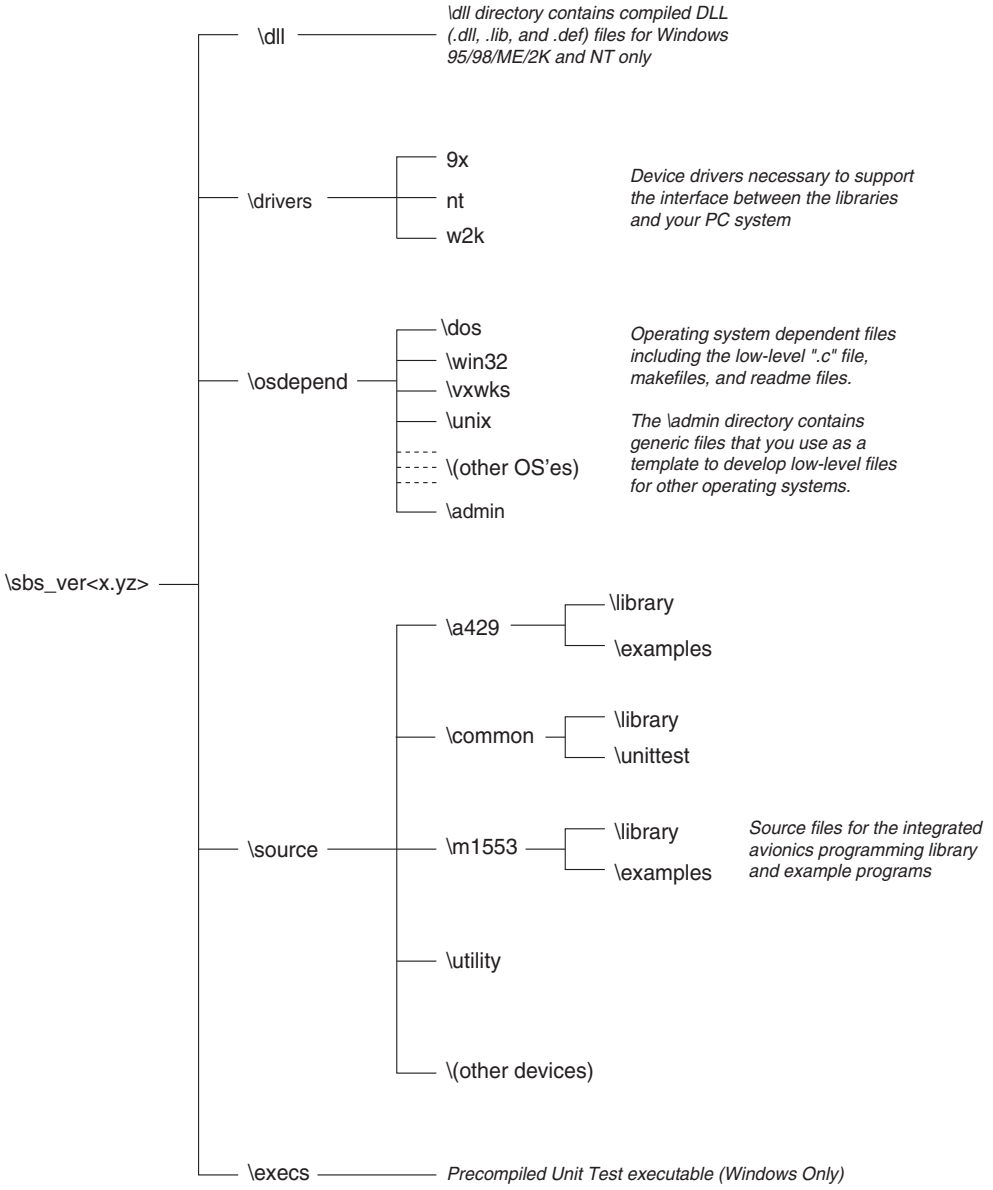

Figure 3.2.1: Default Directory Structure

2. Create the SBS user directory structure shown in Figure 3.2.2 by adding *working* and *firmware* directories under the *sbs_ver<x.yz>* directory, where *<x.yz>* is the version number of the current release.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

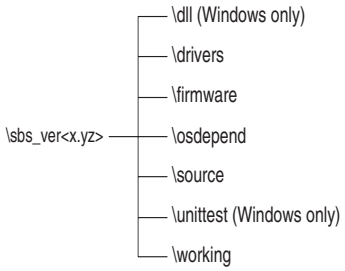

Figure 3.2.2: User Directory Structure

Note: The *\working* directory is a place for you to create and work with files without disturbing other files and directories.

3. Copy the firmware file(s) directly from the Firmware disk to the *\sbs_ver<x.yz>\firmware* directory on your system.

Tip: See the chapter *Performing System-Specific Installation* on page 21 to continue the software installation process.

3.2.2 UNIX-Based Operating Systems

To install the interface libraries and operating system software on your UNIX-based system, you must first copy the software to a PC system on your network, then transfer it via ftp to the UNIX-based system in which you are installing the PCI card. The steps below guide you through the process.

1. Copy the software to a PC system on your network by following procedure steps 1–3 beginning on page 10 in the preceding subsection, *Windows Operating Systems*. Make sure to select the files needed for your target UNIX-based system, not the PC system.
2. Enter `ftp` to access your host system.
3. Create the directory structure shown in Figure 3.2.3 using the ftp `mkdir` utility.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

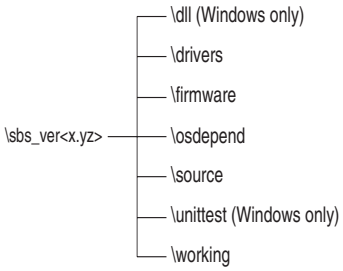

Figure 3.2.3: User Directory Structure

4. Use the ftp `put` or `mput` utility to transfer the interface library files from the PC environment to the host system (into the above tree structure).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4: Installing the Hardware

The sections in this chapter provide instructions on how to configure and install the A429 PCI2-8 or A429 PCI2-16 hardware. The sections are the following:

- Installing the Card
- Making Auxiliary Connections for External Signals
- Attaching the Loopback Assembly

4.1 Installing the Card

Warning: This is an electronic product that is sensitive to electrostatic discharge. Take normal precautions in handling the board to prevent damage.

To install the A429 PCI2-8 or A429 PCI2-16 card, follow the procedure below.

1. Ensure that power is disconnected from your computer.
2. Insert the A429 PCI2-8 or A429 PCI2-16 card into one of the PCI slots in your system.
3. Power up the host system and verify that both the status and activity LEDs are off.

   Figure 4.1.1 shows the locations of the LEDs on the A429 PCI2-16. If any of these LEDs is not in the proper state, contact SBS Technical Support.

Note: During board operation, refer to Figure 9.2.2 and Table 9.2.1 for information on connector pinouts.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

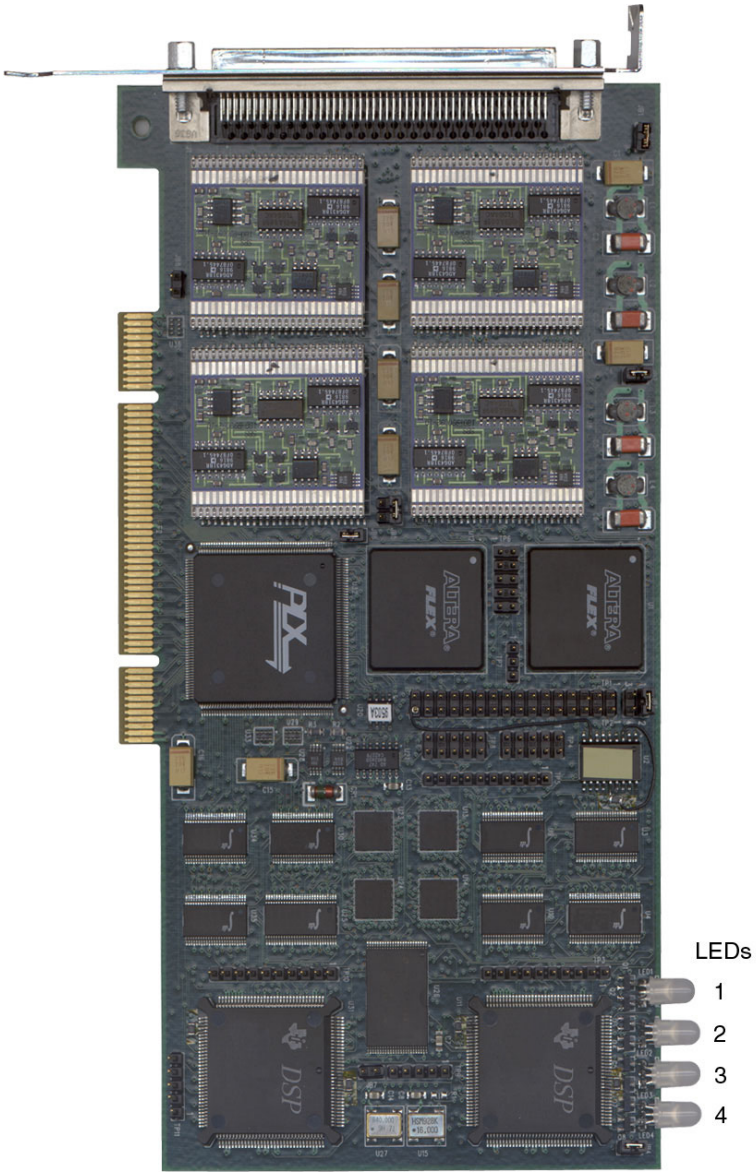

Figure 4.1.1: A429 PCI2-16 Board

LED Status Indicators

There are 4 LEDs located on the top edge of the PCI2-16 board. See Figure 4.1.1. Table 4.1.1 describes each LED for the PCI2-8 or PCI2-16 and their possible states .

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4.1.1: LED Descriptions

LED	Indicates:	Possible states:
1	Device 1 Status	Red: Power up state. Altera not configured, DSP not running Orange: Altera configured, DSP not running Green: Altera configured, DSP running Off: Card is malfunctioning
2	Device 1 activity	Off: No bus activity (power up state) Red: Bus error on any channel (stays red for 130 milliseconds) Green: Normal bus activity
3	Device 2 Status (Dual device cards only)	Red: Power up state. Altera not configured, DSP not running Orange: Altera configured, DSP not running Green: Altera configured, DSP running Off: Card is malfunctioning
4	Device 2 Activity (Dual device cards only)	Off: No bus activity (power up state) Red: Bus error on any channel (stays red for 130 milliseconds) Green: Normal bus activity

Notes:
1) LED 2 indicates activity for all eight device 1 ARINC channels.
2) LED 4 indicates activity for all eight device 2 ARINC channels.
3) If the LED glows red, one or more channels have had a bus error.
4) If the LED glows green, one or more ARINC channels are active.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.2 Making Auxiliary Connections for External Signals

In order to connect external signals to the A429 PCI2-8 or A429 PCI2-16 board, you need to make the proper connections to the 100-pin connector shown in Figure 9.2.2 on page 58.

IRIG Signal

If you are using an external IRIG signal as your timing source, make the following connections:

1. Connect the IRIG signal to pin 43 (IRIG In) on the 100-pin connector.

Note: The IRIG input impedance is 10 kΩ.

2. Connect the ground to one of the available ground pins on the 100-pin connector.

Note: The IRIG signal is applicable only if you purchased the IRIG option.

External Trigger

If you are using an external trigger (in/out), make the following connections:

1. Connect the trigger signal to one of the available external trigger pins (pins 34–41) on the 100-pin connector.
2. Connect the ground to one of the available ground pins on the 100-pin connector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.3 Attaching the Loopback Assembly

The loopback assembly included with the A429 PCI2-8 and A429 PCI2-16 module is required for testing the board. It provides a loopback connection for each channel. Note that dedicated loopback inputs are provided for each channel. Table 9.2.3 lists the A429 PCI2-8 and A429 PCI2-16 loopback connector part numbers. Table 9.2.4 lists the A429 PCI2-8 and A429 PCI2-16 loopback connector pinouts.

Before Testing the A429 PCI2-8 or PCI2-16

Attach the loopback assembly to the P1 connector on the front panel of the board (see Figure 4.3.1).

Cross Reference: Before operating the A429 PCI2-16 on an A429 bus, see the instructions on page 47 of this manual for connecting the A429 PCI2-16 to an ARINC bus.

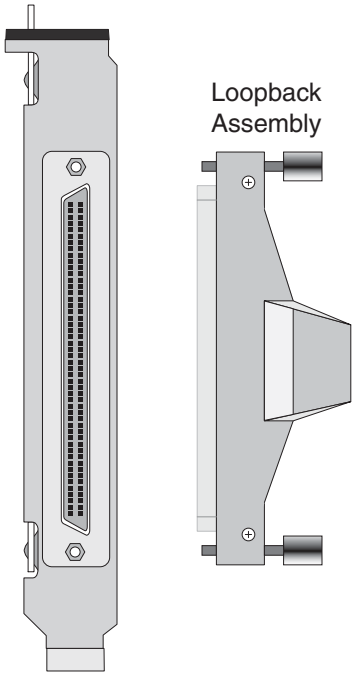

Figure 4.3.1: Attaching the Loopback Assembly to the A429 PCI2-8 and PCI2-16

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5: Performing System-Specific Installation

Note: These procedures are for use with non-PASS cards. For PASS card installation, refer to the *PASS 3200 User's Manual*.

The sections in this chapter provide instructions on how to install the files specific to your operating system and platform. Instructions are provided for the following systems:

- Windows 95/98/ME
- Windows NT
- Windows 2000
- IRIX 6.5

Note: If you are using a system not covered in this chapter, see Appendices A though D of the *Integrated Avionics Library Reference Manual* for instructions on installing the files for your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.1 Windows 95/98/ME

Use this procedure with the Integrated Avionics Library, Version 6.3X or later, where PASS-3200 has not been installed.

1. After you have inserted the card into one of the slots in your system and powered up your system, the **New Hardware Found** dialog appears. Select **Driver from disk provided by hardware manufacturer** and click **OK**.
2. Click the **Browse** button.
3. Navigate to the drive where you installed the SBS software.

Note: If you're using Windows 95, the operating system copies the .vxd and the .inf files automatically.

4. Select *sbs_ver<x.yz>\drivers\sbs.inf*, where *<x.yz>* is the version number of the current release, and click **OK**.
5. If you are prompted to specify the location of the virtual device driver *sbspci.vxd*, click the **Browse** button, select *sbs_ver<x.yz>\drivers\sbspci.vxd*, and click **OK**.

Note: Parameters such as I/O base, base memory address, and interrupt vector are configured by the computer. These parameters are ignored in the *sbs_dev.cfg* (or *dev_cfg.h*) configuration file.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.2 Windows NT

Use this procedure with the Integrated Avionics Library, Version 6.3X or later, where PASS-3200 has not been installed.

Warning: In order to run **configmgr**, you must have Microsoft Internet Explorer version 4.0 or higher installed on your system.

Note: You must log on with Administrator privileges before performing these procedures.

1. If you're using the Windows NT operating system, copy the files in the *[drive]:\sbs_ver<x.yz>\drivers\Windows NT* directory, where *<x.yz>* is the version number of the current release, to the *[drive]:\winnt\system32\driver* directory.

2. Execute *[drive]:\sbs_ver<x.yz>\source\utility\configMgr.exe*.

Warning: Do not execute this program from the SBS Resource CD.

3. Select the **ADD PC Board** menu option.

4. Select **PCI Board** from the four board types offered. Once you select the type, follow the appropriate instructions for entering board-specific information.

   For PCI Boards:

   - Select **A429 PCI 16 (Dual Device)** for the board type from the **Board Type** pull down menu.
   - Select the appropriate board function mode by clicking on the **Mode** radio button under **Board Type**. For A429 boards, select **STD**.
   - Click the **Apply** button, and proceed to Step 5.

5. Repeat Step 3 and Step 4 for any additional boards.

6. Click on the **Restart driver to update changes** button.

7. When finished, reboot for the changes to take effect.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.3 Windows 2000

Use this procedure with the Integrated Avionics Library, Version 6.3X or later, where PASS-3200 has not been installed.

Warning: In order to run **configmgr**, you must have Microsoft Internet Explorer version 4.0 or higher installed on your system.

Note: You must log on with Administrator privileges before performing these procedures.

1. Install your SBS device in your unplugged system.
2. After your SBS device is installed, plug in your system and start Windows 2000.

   The system indicates it found the device and the **Welcome to the Found New Hardware Wizard** window appears.
3. Select **Next**.

   The **Install Hardware Device Drivers** window appears.
4. Select the bottom choice, **Display a list** and click on **Next**.

   The **Hardware Type** window appears.
5. Scroll down to the icon called **Other devices**. This has a (yellow) question mark (?) in front of it. Click **Next**.

   The **Select a Device Driver** window appears.
6. Select the button labeled **Have Disk**.

   The **Install From Disk** window appears.
7. In the lower right portion of the window, select **Browse**.
8. Locate your SBS driver directory for Windows 2000. Select *SBSWDMPC.inf* for the PCI card. Select **Open**.

   The **Install From Disk** window reappears.
9. Click the button labeled **OK**.

   The **Select a Device Driver** window appears.
10. Select your device from the list. For example, the PCI version of the WMUX is the choice **SBS 1553 PCI (PLX 9080)**. Select **Next**.

Note: If you get a warning that it cannot be verified, disregard and close this warning window.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The **Start Device Driver Installation** window appears.

11. Select **Next**.

    The files needed are copied.

    The **Completing the Found New Hardware Wizard** window appears.

12. Select **Finish**.

13. Now, execute *[drive]:\sbs_ver<x.yz>\source\utility\configMgr.exe*, where *<x.yz>* is the version number of the current release of your installed libraries. Click on the 1st blank line, select **Add PC Card** from the menu, then select and click the proper card choice (**PCI Board**).

    Table 5.3.1 lists the windows which can be displayed for the PC card selection choice.

Table 5.3.1: PC Card Selection Choice and Window Displayed

Add PC Card Menu Choice	Window Displayed
ISA Board	PC3 Card Setup
PCI Board	PCI Card Setup
PCMCIA Board	PCMCIA Card Setup
PC104 Board	Setup 1553-PC104

14. In the next window, select **A429 PCI 16 (Dual Device)** for the board type from the drop-down menu and **STD**.

15. Restart your computer for the change to take effect.

16. Setup your *SBS_DEV.cfg* file to reflect the device you have. Place this copy, the *unittest.exe* file, and your firmware file (*F066J.DAT* for the WMUX or similar for other cards) in the appropriate directory.

    You should now be able to use your *Unittest.exe* to verify device setup and operation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.4 IRIX 6.5

In order to operate the PCI card in a SGI machine that utilizes IRIX 6.5.X, you need to be able to open the path that the UNIX system has assigned to it. This path is recreated each time the machine is booted with the `-r` option. If cards are moved or added/removed, the pathnames of the cards will likely change. This could result in having to modify the *sbs_dev.cfg* file to enter the new information. The following steps provide a procedure to identify the card and compile the unit test code.

1. Install the card into the card cage and reboot the system using the **–r** option to force the IRIX system to redetect the cards installed. On some systems the **–r** is not required. If you're unsure, check with your system administrator.

2. Login to the system.

3. Change directories to */hw/.id/pci* and do a **ls** command. The screen will display something similar to the following.

   ```
   10B5906D     11720C14     10B59080
   ```

   The numbers above are the Vendor/Device ID values for each PCI card installed in the system. For example, the above configuration shows two SBS cards installed. The 10B5906D would be for a single channel 1553 card and the 10B59080 would be either a Dual Channel 1553 card, or an 8 channel ARINC card.

4. Do an **ls –l** on each of these directories and record the symbolic link to the card. This is a base path to the card and will be different depending on your configuration. One example of the path appears below:

   /hw/module/1/slot/io2/pci_xio/pci/0

   This is the path that the system established to the card.

5. To access the user memory on the card, an open command will be done in the libraries to the Base Address 2 register of the PCI interface chip. The path to this register is */base/2* added to the path above, resulting in the following path.

   /hw/module/1/slot/io2/pci_xio/pci/0/base/2

   Note this path and record it for later use as it will be used in the `dd_name=field` of the *sbs_dev.cfg* file.

6. Repeat step 5 for each SBS card in the system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6: Running Unit Test

To verify that the A429 PCI2-8 or A429 PCI2-16 is properly installed and operational, use the instructions in the following sections to run the Unit Test application:

- Introduction
- Using the Combined (1553 and A429) Unit Test Executable
- Setting up the Device Configuration File
- Unit Test Using the Console Mode
- Troubleshooting

Note: You must have an ANSI compatible terminal or driver in order to run Unit Test.

6.1 Introduction

The executable for Windows for the combined Unit Test application is supplied in the *sbs_ver<x.yz>\execs* directory, where *<x.yz>* is the version number of the current release. If you are using one of these operating systems with the A429 PCI2-8 or A429 PCI2-16 card and wish to use the combined Unit Test, proceed to the next section. If you do not have access to the distributed Unit Test executable, if there is not a precompiled executable for your operating system, or if you wish to run a stand-alone A429 Unit Test, use the instructions in the Sample A429 Applications Chapter of the *ARINC User's Manual* to compile a new Unit Test.

You can begin using the Unit Test by going to Unit Test Using the Console Mode in Section 6.4.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.2 Using the Combined (1553 and A429) Unit Test Executable

This section describes the procedures for using the combined Unit Test. The topics are as follows:

- Operating Systems with File Systems
- Operating Systems without File Systems

6.2.1 Operating Systems with File Systems

To use the precompiled, combined Unit Test for Windows, complete the following steps:

1. Copy the Unit Test executable from the *\sbs_ver<x.yz>\execs\unittest.exe* directory to the *\sbs_ver<x.yz>\working* directory (where *<x.yz>* is the version number of the current release).
2. Copy the *sbs_dev.cfg* file from the *\sbs_ver<x.yz>\source\common\library* directory to the *\sbs_ver<x.yz>\working* directory.
3. Copy the firmware files from the *\sbs_ver<x.yz>\firmware* directory to the *\sbs_ver<x.yz>\working* directory.
4. Set up the *sbs_dev.cfg* file as described in the next section, *Setting up the Device Configuration File*.

6.2.2 Operating Systems without File Systems

1. Refer to the Sample A429 Applications Chapter of the *ARINC User's Manual* to determine the necessary files and appropriate compiler directives. Copy the appropriate files into the *\sbs_ver<x.yz>\working* directory, where *<x.yz>* is the version number of the current release.
2. Set up the *dev_cfg.h* file as described in the next section, *Setting up the Device Configuration File*.
3. Compile your Unit Test application as described in the Sample A429 Applications Chapter of the *ARINC User's Manual*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.3 Setting up the Device Configuration File

Device parameter values for your SBS device(s) must be defined in one of the following two files:

- *sbs_dev.cfg*, if your operating system has a file system
- *dev_cfg.h*, if your operating system does not have a file system

The *sbs_dev.cfg* device configuration file is an ASCII text file containing information that your application uses to initialize one or more SBS devices. The SBS device's initialization procedure calls a parser function (`sbs_parse_config_file()`) that reads the information in the configuration file. The parser function must be able to correctly read and verify the information for an SBS device before further library calls can be made. Because the `sbs_parse_config_file()` function reads the *sbs_dev.cfg* file at run-time, you can modify *sbs_dev.cfg* without recompiling the application.

If your operating system does not have a file system, you should use the *dev_cfg.h* file instead of the *sbs_dev.cfg* file. The *dev_cfg.h* file is an array of strings with the same format and keywords as the *sbs_dev.cfg* file. It is parsed in the same manner as the *sbs_dev.cfg* file. However, you must recompile your application each time you edit *dev_cfg.h* for your changes to take effect.



Software Reference: The *sbs_dev.cfg* and *dev_cfg.h* configuration files are located in the directory in which you installed the Integrated Avionics Library under the *\install\library\source\common\library* directory.

A description and examples of the *sbs_dev.cfg* and *dev_cfg.h* files are provided in the following sections:

- Format
- Keywords
- sbs_dev.cfg File
- dev_cfg.h File

6.3.1 Format

The format of the *sbs_dev.cfg* and *dev_cfg.h* files resembles an *.ini* file found on most PCs. Values contained in this file vary based on your SBS device(s), system hardware, and operating system. Every device requires a separate set of keyword entries in the configuration file. (Thus, each single-device card requires a single set of keyword entries, and each multidevice card requires mul-

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

tiple sets.)

The file is set up as follows:

- An equal sign (=) links each keyword with a value.
- The variable <num> represents a numerical value.
- The variable <name> represents a character string.
- The variable <bool> represents a boolean (TRUE or FALSE)
- The parser recognizes the following characters appended to the value string:
  - b (binary)
  - o (octal)
  - h (hex)
  - d (decimal; the default if no character is present)
- A semicolon at the beginning of a line denotes a comment line, and the parser ignores the entire line.

6.3.2 Keywords

Table 6.3.1 provides a description of the keywords in the *sbs_dev.cfg* file that are needed for configuring the A429 PCI2-8 or A429 PCI2-16 card.

Table 6.3.1: Required Configuration File Keywords for the A429 PCI2-8 or PCI2-16

Keyword=<Specifier>	Required for	Description
[DEVICE=<num>]	All operating systems and platforms	This line is required before all other keywords for a device. <num> represents a unique number, starting at 1, that identifies the SBS device.
dd_name=<name>	Windows NT, 9x, 2000, ME, and XP; some UNIX systems (not required for vxWorks)	**<name>** specifies the UNIX or Windows NT device driver name. It contains a text string with the name of the device driver node associated with the SBS device. For UNIX, **<name>** is the filename of the driver in the */dev* directory. For IRIX 6.4/6.5 systems, **<name>** is the XIO pathname that points to the memory space of the PCI bus for your card. For Windows NT, this value must correspond exactly to the name of the instantiated driver for the device, which can be found in the device directory using the Device Manager. It is of the form **sbspci320**, **sbspci321**, etc. For Windows 95/98 the driver name is **SBSPCI**.
device_type=<name>	All operating systems and platforms	<name> specifies the type of SBS device being used. Set the value to one of the following: A429_PCI2_8, A429_PCI2_16_1, or A429_PCI2_16_2.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Keyword=<Specifier>	Required for	Description
`firmware=<name>`	All operating systems and platforms	**`<name>`** specifies the firmware filename. If you define **`NO_FILE_SYSTEM`** in *sbs_sys.h*, the firmware will be loaded from a data array found in *firmware.h*. The array is specified by the "**`firmware=`**" entry in the *dev_cfg.h* configuration file. You can generate the *firmware.h* file using the utility program *setup_fw*.c. Devices that have flash memory still require this field to reprogram the flash memory. **Note:** Verify that the firmware filename listed in the *sbs_dev.cfg* or *dev_cfg.h* file is the same as that of the firmware file provided with the software distribution.
`num_receive=<num>`	All operating systems and platforms	`<num>` specifies the number of receive channels for an A429 device. This is set by the user in the range of 0 to 8. Receive channels are numbered starting with 1. The sum of `num_transmit` and `num_receive` must equal the total number of channels for that device.
`num_transmit=<num>`	All operating systems and platforms	`<num>` specifies the number of transmit channels for an A429 device. This is set by the user in the range of 0 to 8. Transmit channels are numbered starting at `num_receive` +1. The sum of `num_transmit` and `num_receive` must equal the total number of channels for that device.
`relative_position=<num>`	Windows 95/98 only	`<num>` is the sequence number of the PCI card as found in the PCI bus slots. The first board is 0, the second board is 1, etc.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.3.3 *sbs_dev.cfg* File

Note: If your operating system does not have a file system, you must use the *dev_cfg.h* file instead of *sbs_dev.cfg*. See page 34 for information on *dev_cfg.h*.

If your operating system has a file system, the device parameter values for each SBS device must be defined in the *sbs_dev.cfg* file. Modify *sbs_dev.cfg* as follows:

1. Change directories to the *\sbs_ver<x.yz>\working* directory, where *<x.yz>* is the version number of the current release, if you are not already there.
2. Edit the *sbs_dev.cfg* file and verify that the settings are correct for the device type, firmware file(s), and number of devices you are using.
3. Save the file.

Examples of the parameters used for the *sbs_dev.cfg* file appear on the following page for a dual-device A429 PCI2-16 card running under the following systems:

- Windows 95/98/ME
- Windows 2000/NT
- IRIX 6.5

These examples show only the required parameters. In the actual *sbs_dev.cfg* file you would remove the comment (semicolon preceding the parameter). All remaining lines are left commented out (preceded by a semicolon). If you are using a single-device card, you should uncomment keywords only for device 1. If you are running your card under an operating system other than those in the examples, refer to Table 6.3.1 to determine the keywords that your operating system requires.

Cross Reference: For an example of the complete *sbs_dev.cfg* file, refer to the *Integrated Avionics Library Reference Manual*.

Note: The values required for your system, including the firmware filename, may differ from those shown below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Windows 95/98/ME

```
[DEVICE=1]
device_type= A429_PCI2_16_1
dd_name=sbspci
firmware=f082g.dat
num_receive=4
num_transmit=4
relative_position=0
[DEVICE=2]
device_type= A429_PCI2_16_2
dd_name=sbspci
firmware=f082g.dat
num_receive=4
num_transmit=4
relative_position=0
```

Windows 2000/NT

```
[DEVICE=1]
device_type= A429_PCI2_16_1
dd_name=sbspci320
firmware=f082g.dat
num_receive=4
num_transmit=4
[DEVICE=2]
device_type= A429_PCI2_16_2
dd_name=sbspci321
firmware=f082g.dat
num_receive=4
num_transmit=4
```

IRIX 6.5

```
[DEVICE=1]
device_type= A429_PCI2_16_1
dd_name=sbspci320
firmware=f082g.dat
num_receive=4
num_transmit=4
[DEVICE=2]
device_type= A429_PCI2_16_2
dd_name=sbspci321
firmware=f082g.dat
num_receive=4
num_transmit=4
```

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.3.4 *dev_cfg.h* File

Note: If your operating system has a file system, you should use the *sbs_dev.cfg* file instead of *dev_cfg.h*. See page 32 for information on *sbs_dev.cfg*.

This file contains the device information to be used in lieu of *sbs_dev.cfg* for embedded systems that do not have a file system. Modify *dev_cfg.h* as follows:

1. Change directories to the *\sbs_ver<x.yz>\working* directory, where *<x.yz>* is the version number of the current release, if you are not already there.
2. Initialize `dev_cfg_array` with the configuration parameters for each card. The keywords in *dev_cfg.h* are identical to those in *sbs_dev.cfg*; see Table 6.3.1 on page 30 for the keyword descriptions.
3. Save the file.
4. Refer to the Sample A429 Applications Chapter of the *ARINC User's Manual* for information on compiling your application.

An example of the parameters used for the *dev_cfg.h* file appears on the following page for a dual-device A429 PCI2-16 card running under vxWorks.

This example shows only the required parameters. In the actual *dev_cfg.h* file you would remove the comment (semicolon preceding the parameter and following the leading quotation mark). All remaining lines are left commented out (preceded by a semicolon after the leading quotation mark). If you are using a single-device card, you should uncomment keywords only for device 1. If you are running your card under an operating system other than the one in the example, refer to Table 6.3.1 to determine the keywords that your operating system requires.

Cross Reference: For an example of the complete *sbs_cfg.h* file, refer to the *Integrated Avionics Library Reference Manual*.

Note: The values required for your system, including the firmware filename, may differ from those shown below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

```
char *dev_cfg_array[] = {
"[DEVICE=1]",
"device_type=A429_PCI2_16_1",
"firmware=f082g.dat",
"num_receive=4",
"num_transmit=4",
"[DEVICE=2]",
"device_type=A429_PCI2_16_2",
"firmware=f082g.dat",
"num_receive=4",
"num_transmit=4"
};
```

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.4 Unit Test Using the Console Mode

This sections gives some of the basic procedures using the Console Mode Unit Test. The procedures are as follows:

- Starting Unit Test Using the Console Mode
- Opening the A429 Device
- Running Built-In Tests (BITs)
- Initializing the A429 Device
- Exiting Unit Test

6.4.1 Starting Unit Test Using the Console Mode

Tips:
Press the carriage return key (**Enter**) to complete menu selections and enter responses to prompts.

Press **Enter** to restore a Unit Test menu following a failure.

1. Execute the Unit Test application.

   As soon as you execute Unit Test, it parses the configuration file (either *sbs_dev.cfg* or *dev_cfg.h*). If your configuration file parses without error, the menu shown in Figure 6.4.1 appears.

```
                    SBS Technologies, Inc.
                A429 Interface Library Unit Test
                  Version X.YZ  Build MMM DD YYYY

                    1 - Device Management Tools
                    2 - Transmitter Tools
                    3 - Receiver Tools
                    4 - Bus Monitor Tools

                    q - Quit Unit Test

                Selection ? >
```

Figure 6.4.1: A429 Interface Library Unit Test Menu

Note: Where shown, X.YZ is the version number of the current release and MMM DD YYYY is the date the current build was compiled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Note: If you are using the precompiled unit test, select **a** at Integrated Avionics Library Unit Test screen and press return. The *A429 Interface Library Unit Test Menu as shown in* Figure 6.4.1 appears.

If a parser error occurs, an error screen may appear instead of the Avionics Interface Library Unit Test Menu. Figure 6.4.2 shows a sample parser error screen. Table 6.5.1 describes the common parser error messages that you may encounter.

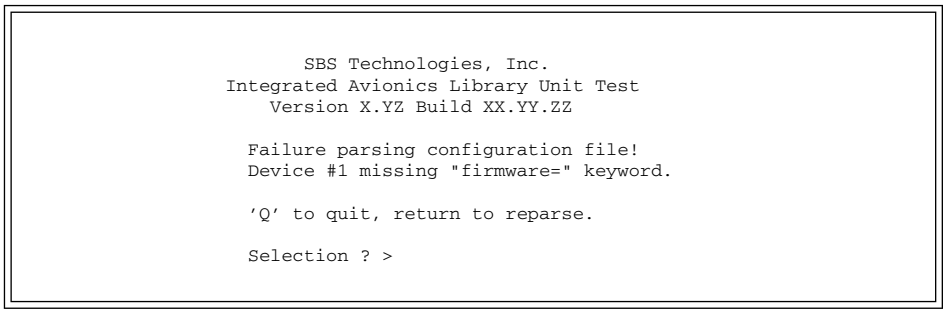
SBS Technologies, Inc.
Integrated Avionics Library Unit Test
Version X.YZ Build XX.YY.ZZ
Failure parsing configuration file!
Device #1 missing "firmware=" keyword.
'Q' to quit, return to reparse.
Selection ? >

Figure 6.4.2: Sample Parser Error Screen

2. If a parser error occurs, proceed to the troubleshooting procedures in Section 6.5.1.

   If no parser error occurs, the menu shown in Figure 6.4.1 appears.

6.4.2 Opening the A429 Device

1. To select **Device Management Tools**, enter `1`.

   The menu shown in Figure 6.4.3 appears.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

```
              A429 Device Management Tools                |                pg1
                                                          |
  1 - Init Device <Steps 2-7>   a - Get Device Clock       |    n - Next Pg->
  2 -  Open Device              b - Set Device Clock       |
  3 -  Load Firmware                                      |    p - Pick dev #
  4 -  Start Application        d - Get A429 Channel Info  |
  5 -  Init Memory                                        |    r - r/w Ram
  6 -  Init Interrupt Q                                   |
  7 -  Create BSM Buffers                                 |    s - Start i/o
                                h - Execute Soft Reset    |    t - sTop  i/o
                                i - Execute BIT           |
  0 - Get Device Info           j - Close Device          |    x - eXit <-Pg
                                                          |
--------------------------------------------------------------------------------
Selection? >



Messages: Device # defaulted to 1.
--------------------------------------------------------------------------------
                    Device #1:  A429_xxx_8  is  CLOSED                 fyyy.dat
```

Figure 6.4.3: A429 Device Management Tools Pg1 Menu

Note: Where shown, xxx is the card type (PCI, cPCI, etc.) of the card installed and fyyy.dat is the firmware being used.

Note: The device defaults to the first device number in the group of devices (in this case device #1). To select an alternate device number, enter **p**. At the "Device Number? >" message, enter the appropriate device number. The message "Device number changed to X. Hit ENTER to continue." appears (X is the number of the selected device). Press Enter. The device number selected appears at the bottom of the A429 Device Management Tools menu.

2. To select **Open Device**, enter `2`.

   The messages shown in Figure 6.4.4 appear.

```
--------------------------------------------------------------------------------
Selection: 2

          Device #1 opened.
Messages: Hit ENTER to continue.
--------------------------------------------------------------------------------
```

Figure 6.4.4: Open Device Messages

3. To continue, press **Enter**.

   The area between the dashed lines clears. The bottom line displays "Device #X: A429_xxx_8 is OPEN" where X is the number of the device and xxx is the card type.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LEDs After power up, LED 1 should be red. After the device 1 is open, LED 1 should turn orange.

LED 2 should remain off during the device 1 open process. When device 1 is closed, the LED should return to red.

After power up, LED 3 should be red (dual device cards only). After the device 2 is open, LED 3 should turn orange.

LED 4 should remain off during the device 2 open process. When device 2 is closed, the LED should return to red.

Cross Reference: For the locations and descriptions of the LEDs, see Figure 4.1.1 on page 16 and Table 4.1.1 on page 17.

6.4.3 Running Built-In Tests (BITs)

Note: The device must be open and you must not be in application mode.

1. To select **Execute Built-In Tests**, enter `i`.

   The messages and prompt shown in Figure 6.4.5 appear between the dashed lines. To enter a firmware source, enter the appropriate number to load from flash, from file, or via driver (depending on the type of card and operating system you are using, you may see only one of these options at the prompt).

```
--------------------------------------------------------------------------------
Selection: > i

'0' = [FILE]; '1' = FLASH; '2' = DRIVER
Firmware Source? >



Messages:
--------------------------------------------------------------------------------
```

Figure 6.4.5: Execute Built-in Tests Firmware Source Screen

2. Enter the appropriate number to load from file, from flash, or via driver (depending on the type of card and operating system you are using, you may see only one of these options at the prompt) and press **Enter**.

   If the tests are successful, messages and prompts similar to Figure 6.4.6 will appear over a 10- to 12-second period.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

```
--------------------------------------------------------------------------------
Selection: > i

'0' = [FILE]; '1' = FLASH; '2' = DRIVER
Firmware Source? > 0
Please Wait (Takes 6 to 9 seconds)...
          BIT passed!
          Device closed. Initialize before running.
Messages:  Hit ENTER to continue.
--------------------------------------------------------------------------------
```

Figure 6.4.6: Execute Built-in Tests Passed Screen

Note: The device is automatically closed after the Built-in Tests have completed.

If the tests are unsuccessful, error messages appear between the dashed lines.

3. To continue (in either case), press **Enter**.

   The area between the dashed lines clears. The bottom line displays "Device #X: A429_xxx_1 is CLOSED" where X is the number of the device and xxx is the card type.

LEDs

- LED 1 should remain green.
- LED 2 should flash once, then remain off.
- LED 3 (dual devices only) should remain green.
- LED 4 (dual devices only) should flash once, then remain off.

Cross Reference: For the locations and descriptions of the LEDs, see Figure 4.1.1 on page 16 and Table 4.1.1 on page 17.

6.4.4 Initializing the A429 Device

1. To select **Initialize Device**, enter `1`.

2. At the Queue Length prompt, press **Enter** to select the displayed default value, or enter a different value.

3. If you do not receive a firmware source prompt, proceed to the next step. If you do receive the firmware source prompt, enter the appropriate number to load from flash, from file, or via driver (depending on the type of card and operating system you are using, you may see only one of these options at the prompt).

Note: The Firmware Source prompt on your screen may be absent or show different options than the screen shown in Figure 6.4.9.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The Initialize ARINC Global Seq Mon Buffers Screen appears. See Figure 6.4.7.

```
--------------------------------------------------------------------------------
Selection: > 1
                                          Global Seq Mon Buffers:
Interrupt queue length [4]? >               # of buffers [2]?   >
'0' = [FILE]; '1' = FLASH; '2' = DRIVER     Buffer size [4096]? >
Firmware Source? >                          Loop [[y[/n?        >


Messages: Please wait ...
--------------------------------------------------------------------------------
```

Figure 6.4.7: Initialize ARINC Global Seq Mon Buffers Screen

4. The following prompts appear one at a time. At each of these prompts, press **Enter** to select the displayed default value, or enter a different value:

   - # of buffers
   - Buffer size
   - Loop

   After the last prompt is entered, The Initialize ARINC Channel Seq Mon Buffers Screen appears. See Figure 6.4.8.

```
--------------------------------------------------------------------------------
Selection: > 1
                                          Channel Seq Mon Buffers:
Interrupt queue length [4]? >               # of buffers [2]?   >
'0' = [FILE]; '1' = FLASH; '2' = DRIVER     Buffer size [256]? >
Firmware Source? >                          Loop [[y[/n?        >


Messages: Please wait ...
--------------------------------------------------------------------------------
```

Figure 6.4.8: Initialize ARINC Channel Seq Mon Buffers Screen

5. The following prompts appear one at a time. At each of these prompts, press **Enter** to select the displayed default value, or enter a different value:

   - # of buffers
   - Buffer size
   - Loop

   If the process is successful, the "Device initialized" message and the "Hit ENTER to continue" prompt shown in Figure 6.4.9 appear between the dashed lines.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

```
--------------------------------------------------------------------------------
Selection: > 1
                                          Channel Seq Mon Buffer:
Interrupt queue length [4]? >               # of buffers [2]?   >
'0' = [FILE]; '1' = FLASH; '2' = DRIVER     buffer size [256]?  >
Firmware Source? >                          Loop [[y[/n?        >

          Device initialized.
Messages: Hit ENTER to continue.
--------------------------------------------------------------------------------
```

Figure 6.4.9: Initialize ARINC Device Passed Screen

If the process is unsuccessful, error messages appear between the dashed lines.

6. Press **Enter** to continue.

   The area between the dashed lines clears. The bottom line displays "Device #X: A429_xxx_8 is STOPPED" where X is the number of the device and xxx is the card type.

LEDs

- LED 1 should remain green.
- LED 2 should remain off.
- LED 3 (dual devices only) should remain green.
- LED 4 (dual devices only) should remain off.

Cross Reference: For the locations and descriptions of the LEDs, see Figure 4.1.1 on page 16 and Table 4.1.1 on page 17.

Troubleshooting If a failure occurs during initialization, proceed to Section 6.5.2.

6.4.5 Exiting Unit Test

1. To return to the main menu, enter `x`.

   The screen clears, and the A429 Interface Library Unit Test menu appears.

2. To exit from the Unit Test application, enter `q`.

   The prompt shown in Figure 6.4.10 appears.

```
Are you sure you want to quit? ([y]/n)? >
```

Figure 6.4.10: Prompt to Quit

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Note: If you are using the precompiled unit test, the Integrated Avionics Library Unit Test screen appears next. Select **q** at Integrated Avionics Library Unit Test screen and press return. The prompt shown in Figure 6.4.10 appears.

3. Enter `y`.

6.5 Troubleshooting

This section discusses troubleshooting if a parser error occurs during the Unit Test using the Console Mode or if a failure occurs during initialization. The procedures are as follows:

- Parser Error
- Initialization Error

6.5.1 Parser Error

Unit Test Using Console Mode

1. Identify parser error using Table 6.5.1.
2. Correct the error in the configuration file. If you are using *sbs_dev.cfg*, press **Return** from the Unit Test error screen to reparse. If you are using *dev_cfg.h*, exit and recompile your code. Repeat step 1 in Section 6.4.

Note: After the configuration file parses without error (i.e., once you see the menu shown in Figure 6.4.1), you are ready to continue.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6.5.1: Parser Error Messages

Error Message	Diagnosis
`Failure parsing configuration file! Error opening <filename> file!`	The indicated file could not be opened.
`Failure parsing configuration file! <keyword>=<num> for device #xx is invalid.`	The parser found a value out of limits in the configuration file. Correct the line containing **<keyword>**.
`Failure parsing configuration file! Application does not support <name> devices!`	The application type **<name>_APP** (where **<name>** is the avionics bus type) is not defined in the *sbs_sys.h* file.
`Failure parsing configuration file! Device #xx missing "<keyword>=" keyword.`	The specified **<keyword>**, which is required for the specified device (**Device #xx**, where **xx** is in the range 1 to **SBS_MAX_DEV**), was not found.
`Failure parsing configuration file! No device defined in configuration file!`	The **Device** keyword was not found in the configuration file.
`Failure parsing configuration file! "<name>" is not a valid device type.`	The **<name>** specified for the **device_type** keyword is not valid. Choose a valid device type from the list included in the configuration file.
`Failure parsing configuration file! "<filename>" not defined in the firmware.h file.`	The **<filename>** specified for the **firmware** keyword in *dev_cfg.h* does not match any firmware filename in the *firmware.h* file.
`Failure parsing configuration file! "<keyword>=<num>" on line xx: duplicate entry.`	A value for the **<keyword>** specified on line **xx** has already been parsed for this device number.
`Failure parsing configuration file! Line number xx has more than 132 characters.`	The number of characters on line **xx** exceeds the maximum number that can be read.
`Failure parsing configuration file! "Device=0" on line xx must be greater than 0.`	The **Device** keyword must have a value greater than zero.
`Failure parsing configuration file! "Device=<num>" on line xx exceeds SBS_MAX_DEV.`	The value **<num>** is greater than the **SBS_MAX_DEV** value specified in the *dev_mgmt.h* file.
`Failure parsing configuration file! "Device=<num>" is a noncontiguous <name> 2nd device.`	The values of the **Device** keywords for the first and second devices of the indicated board (**<name>** = **PC3** or **PC16**) must be consecutive numbers.

6.5.2 Initialization Error

If a failure occurs during initialization, do the following:

1. Turn off the system, and then physically remove and reseat the card in the host computer.
2. Check all cable connections and verify that they are secure.
3. Try initializing the card again.
4. If a failure still occurs, refer to Table 6.5.2.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6.5.2: Initialization Errors and Error Messages

Error	Diagnosis
Computer system locked up	Interrupt request (IRQ) level is in use. Specify a different IRQ level in the *sbs_dev.cfg* or *dev_cfg.h* file.
One of the following error messages appeared:	
`Initialize device failed!` `sbs_open_device(): The device driver failed to initialize`	The device driver was not started on reboot. Verify that the device is started in Windows NT or that the device driver is selected and loaded in Windows 95/98.
`Initialize device failed!` `sbs_open_device(): Shared memory fail`	The **base_address** specified in the *sbs_dev.cfg* or *dev_cfg.h* file is invalid or there is a problem with the operating system device driver. On UNIX systems, verify that the correct filename is specified for the **dd_name** keyword in *sbs_dev.cfg* or *dev_cfg.h*.
`Initialize device failed!` `sbs_load_ram(): Download error`	The **base_address** specified in the *sbs_dev.cfg* or *dev_cfg.h* file is invalid. For MS-DOS, Windows 3.x, and Windows 95/98/NT, verify that the required memory region is excluded in the *config.sys* file.
`Initialize device failed!` `sbs_load_ram(): File open error`	Your application could not open the firmware file specified in *sbs_dev.cfg* or *dev_cfg.h*. Verify that the firmware filename specified in *sbs_dev.cfg* or *dev_cfg.h* is correct and that the specified firmware file is in your *\working* directory.
`Initialize device failed!` `sbs_start_firmware(): Start firmware failure`	The firmware did not properly start. Verify that the proper firmware file(s) are specified in *sbs_dev.cfg* or *dev_cfg.h*.
`Open device failed!` `sbs_open_device(): Device probe fail`	It is possible that the PCI device driver may be conflicting with the resources of another device. Try changing the memory setting for the PCI device in system resources. Conflicts with video display adapters using ROM Shadowing have resulted in resource conflicts.

Cross Reference: For further help with initialization failures, see *Customer Support Services* in the Introduction Chapter of the *ARINC User's Manual*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7: Connecting to A429 Bus

If the Unit Test procedures (conducted in the previous chapter) ran without error, you may proceed with ARINC 429 operations. However, you must first connect each channel of the card to an actual A429 bus(es) via the connector (see Figure 7.0.1), as appropriate for your system. Pinouts for the A429 PCI2-8 and A429 PCI2-16 connector are listed in Table 9.2.1 on page 56.

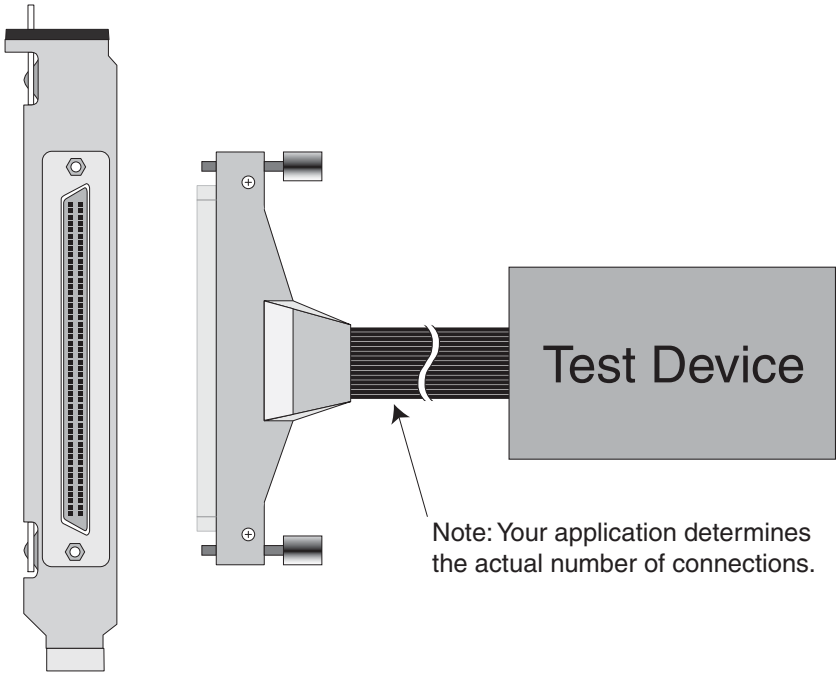

Figure 7.0.1: Connecting the A429 PCI2-8 or A429 PCI2-16 to an A429 Bus

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8: What to Do Next

If your card is properly connected to an A429 bus, you may proceed in one or more of the following ways:

➢ Run sample A429 applications.

Cross Reference: If you are a first-time user, SBS recommends that you execute the sample A429 applications that are included with the A429 product shipment. These applications are detailed in the Sample A429 Applications Chapter of the *ARINC User's Manual*.

➢ Build a custom A429 application.

Cross Reference: If you are an advanced user, you may wish to begin designing your own A429 application. See the *ARINC User's Manual* for complete details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9: Hardware Specifications

This chapter presents information about the A429 PCI2-8 and A429 PCI2-16 hardware, including:

- General Product Information
- Physical Specifications
- Operational Specifications

The General Product Information section contains general information for the A429 PCI2-8 and A429 PCI2-16 card, including the cage code number, extended warranty information, front panel part numbers and ordering instructions, and external signal characteristics.

In the Physical Specifications section, you can find information about component locations, dimensions, jumper and DIP switch settings, connectors, pinouts diagrams, and where you can order connecting cables and terminators.

The Operational Specifications section contains information about the operational aspects of the card, including temperatures, MTBF, and hardware reset.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.1 General Product Information

The information in this section applies to the A429 PCI2-8 and A429 PCI2-16 hardware. The following topics are covered:

- Cage Code Number
- Extended Warranty Information
- Front Panel Connectors and Ordering Instructions
- External Signal Characteristics

9.1.1 Cage Code Number

0BAS8

9.1.2 Extended Warranty Information

SBS offers a comprehensive maintenance service for the A429 products. Even though SBS boards rarely fail, these services assure that the end user has thorough coverage and minimal down time in case of a failure.

SBS products include a one-year, parts and labor warranty. An extended warranty may be purchased to extend this service beyond the first year. This provides the customer with 10-day turn-around for the repair of a module (or provides a replacement module at no cost). Large-quantity repairs may require a longer turn-around time. The cost is minimal and agreements are normally for one-year periods.

For more information or to receive a copy of the maintenance agreement, contact SBS Technologies at one of the numbers listed on the inside cover of this manual and specify “Warranty Support.”

9.1.3 Front Panel Connectors and Ordering Instructions

The connectors listed in Table 9.1.1 may be purchased from the following vendor:

DigiKey
1-800-344-4539
Fax: (218) 681-3380

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 9.1.1: Front Panel Connectors

	Front Panel Connector		Mating Connector
Board	Location	Part Number	Part Number
PC8	P2	AMP 747846-6	Standard male type DB25 connector, such as AMP 747547-6
PC16 and cPCI-8	J1	AMP 748482-6	44-pin high-density D-SUB male-type connector, such as AMP 748475-1
PC104	J3	Sullins S2112-36-ND	16-pin connector AMP 746288-3
PCI-8	J1	AMP 748482-6	44-pin high-density D-SUB male-type connector, such as AMP 748475-1
PCI2-8/16	J1	AMP 787170-9	100-pin connector AMP 749111-8
PCM2	J1	AMP 748481-6	Standard male-type DB26 connector, such as Pan Pacific PP CDHS26P
PMC	J1	AMP 787171-5	AMP 988-050-030-121
V2	P1	AMP 748482-6	44-pin high-density D-SUB male-type connector, such as AMP 748475-1

A loopback connector is provided to allow all 8 (for the PC8) or 16 channels (for the PC16 and V2) on the module to be tested prior to making a connection to an ARINC 429 bus.

9.1.4 External Signal Characteristics

External Trigger/Clock

The external trigger/clock feature is standard on all A429 products, with the exception of the PCM2 (it is available on request for the PCM2).

The external trigger is a Transistor-Transistor Logic (TTL) signal having the characteristics shown in Figure 9.1.1.

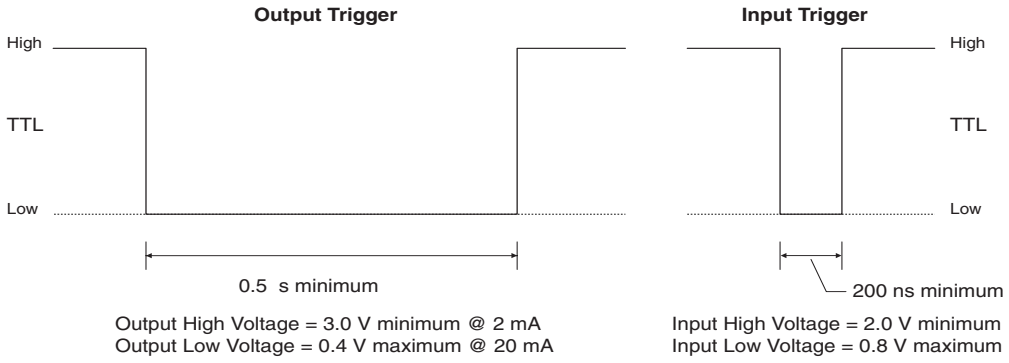

Figure 9.1.1: Characteristics of A429 Trigger Signals

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IRIG The IRIG clock feature is an option which must be ordered at the time of purchase.

Note: The IRIG input impedance for all A429 products is 10 kΩ.

9.2 Physical Specifications

The information in this section describes the physical specifications for the A429-PCI2-8 and A429-PCI2-16 cards. The following topics are covered:

- General
- Channels
- Board Layout
- Board Dimensions
- System Timer
- Jumper Settings
- J1 Pinouts
- LED Status Indicators
- Loopback Assembly
- Part Numbers and Ordering Instructions

9.2.1 General

Concurrent and independent A429 capabilities:

- Full transmit operation
- 100% bus monitoring (independent receiver channel monitoring or global monitoring)

9.2.2 Channels

There are eight A429 channels for PCI2-8 and sixteen A429 channels for PCI2-16. Each channel is configurable for transmit or receive operation, with the following conditions:

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Receive channels must be a block of consecutive channels
- Transmit channels must be a block of consecutive channels
- The block of receive channels must precede the block of transmit channels

9.2.3 Board Layout

The layout of the A429 PCI2-8/PCI2-16 boards is shown in Figure 9.2.1.

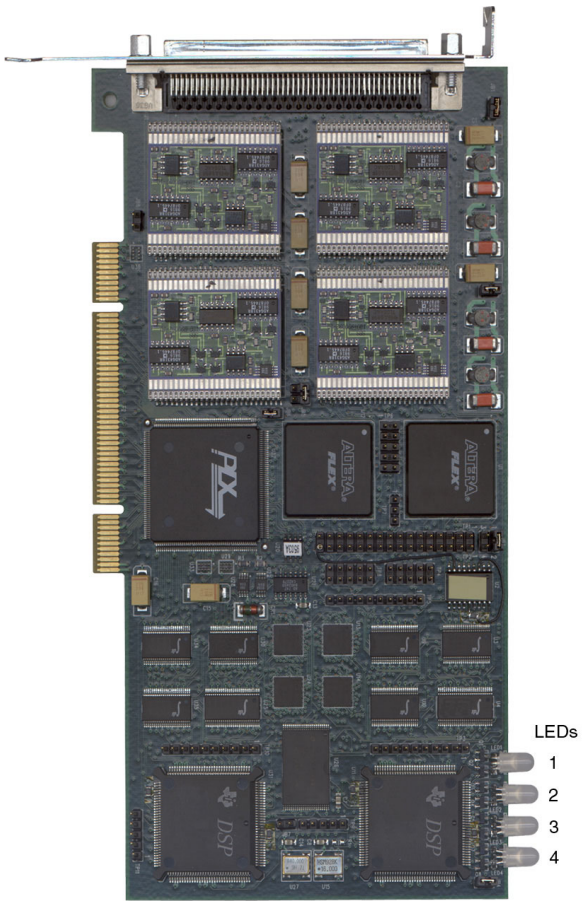

Figure 9.2.1: A429 PCI2-8/PCI2-16 Board Layout

9.2.4 Board Dimensions

PCI card length = 7.9 inches

9.2.5 System Timer

1-microsecond, 48-bit time-stamp clock IRIG format.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.2.6 Jumper Settings

If flash has been programmed, jumper JB3 (if installed) causes the board to autoboot.

9.2.7 J1 Pinouts

Table 9.2.1 lists the pinouts for the J1 connector. Figure 9.2.2 shows the locations of the J1 pins on the PCI2-8/PCI2-16 boards.

Table 9.2.1: Pinouts for J1 Connector

Pin	Description	Pin	Description
1	Channel 1+	51	Channel 1-
2	DIn 1+	52	DIn 1-
3	Channel 2+	53	Channel 2-
4	DIn 2+	54	DIn 2-
5	Channel 3+	55	Channel 3-
6	DIn 3+	56	DIn 3-
7	Channel 4+	57	Channel 4-
8	DIn 4+	58	DIn 4-
9	Channel 5+	59	Channel 5-
10	DIn 5+	60	DIn 5-
11	Channel 6+	61	Channel 6-
12	DIn 6+	62	DIn 6-
13	Channel 7+	63	Channel 7-
14	DIn 7+	64	DIn 7-
15	Channel 8+	65	Channel 8-
16	DIn 8+	66	DIn 8-
17	Channel 9+	67	Channel 9-
18	DIn 9+	68	DIn 9-
19	Channel 10+	69	Channel 10-
20	DIn 10+	70	DIn 10-
21	Channel 11+	71	Channel 11-
22	DIn 11+	72	DIn 11-
23	Channel 12+	73	Channel 12-
24	DIn 12+	74	DIn 12-
25	Channel 13+	75	Channel 13-
26	DIn 13+	76	DIn 13-

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Pin	Description	Pin	Description
27	Channel 14+	77	Channel 14-
28	DIn 14+	78	DIn 14-
29	Channel 15+	79	Channel 15-
30	DIn 15+	80	DIn 15-
31	Channel 16+	81	Channel 16-
32	DIn 16+	82	DIn 16-
33	Unused	83	Unused
34	Ext Trig 1 (Dev 1)	84	GND
35	Ext Trig 2 (Dev 1)	85	GND
36	Ext Trig 3 (Dev 1)	86	GND
37	Ext Trig 4 (Dev 1)	87	GND
38	Ext Trig 1 (Dev 2)	88	GND
39	Ext Trig 2 (Dev 2)	89	GND
40	Ext Trig 3 (Dev 2)	90	GND
41	Ext Trig 4 (Dev 2)	91	GND
42	Unused	92	Unused
43	IRIG Input (Optional)	93	GND
44	Unused	94	Unused
45	Ext Clk	95	GND
46	Ext En	96	GND
47	Unused	97	Unused
48	Unused	98	Unused
49	Unused	99	Unused
50	Unused	100	Unused

Note: Din refers to special dedicated inputs currently utilized only for external loop-back testing.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

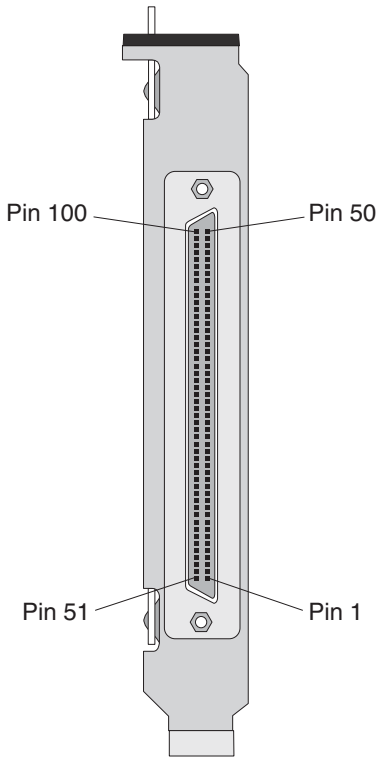

Figure 9.2.2: A429 PCI2-8/PCI2-16, Front Panel Pinouts

9.2.8 LED Status Indicators

There are 4 LEDs located on the top edge of board; shown in Figure 9.2.1. Table 9.2.2 describes each LED and it's possible states.

Table 9.2.2: LED Descriptions

LED	Indicates:	Possible states:
1	Device 1 Status	Red: Power up state. Altera not loaded, DSP not running
		Orange: Altera successfully loaded, DSP not running
		Green: Altera configured, DSP running (Reset Input signal is inactive).
		Off: If off momentarily, loading from FLASH is in process. If LED remains off, card is malfunctioning.
2	Device 1 activity	Off: No bus activity (power up state)
		Red: Bus error on any channel (stays red for 130 mseconds)
		Green: Normal bus activity

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED	Indicates:	Possible states:
3	Device 2 Status (Dual device cards only)	Red: Power up state. Altera not loaded, DSP not running
		Orange: Altera successfully loaded, DSP not running
		Green: Altera configured, DSP running (Reset Input signal is inactive).
		Off: If off momentarily, loading from FLASH is in process. If LED remains off, card is malfunctioning.
4	Device 2 Activity (Dual device cards only)	Off: No bus activity (power up state)
		Red: Bus error on any channel (stays red for 130 mseconds)
		Green: Normal bus activity

Notes:
1) LED 2 indicates activity for all eight device 1 ARINC channels.
2) LED 4 indicates activity for all eight device 2 ARINC channels.
3) If the LED glows red, one or more channels have had a bus error.
4) If the LED glows green, one or more ARINC channels are active.

9.2.9 Loopback Assembly

The loopback assembly included with the A429 card is required for testing the board. It provides a loopback connection from channel 1 to channel 5, channel 2 to channel 6, channel 3 to channel 7, and channel 4 to channel 8. Figure 9.2.3 shows how to attach the loopback assembly. Table 9.2.4 lists the PCI2-8/PCI2-16 loopback connector pinout.

Table 9.2.3 lists the A429 PCI2-16 loopback connector part numbers.

Table 9.2.3: Loopback Connector Part Numbers

Part	Amp Part Number	SBS PArt Number
Connector	749111-8	111-060000-28
Connector Shell	749081-1	111-900000-11

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

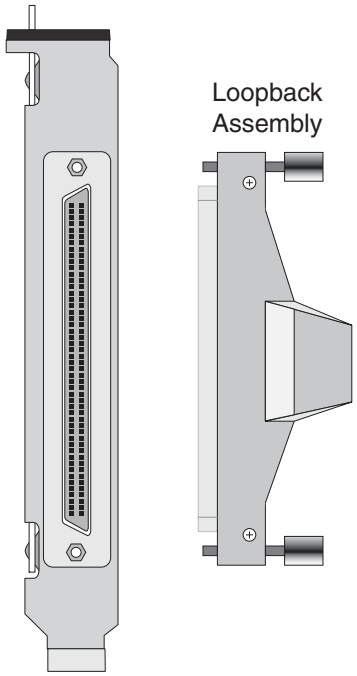

Figure 9.2.3: Attaching the Loopback Assembly to the A429 PCI2-8/16

Table 9.2.4: A429 PCI2-8/PCI2-16 Loopback Connector Pinout

Receive Channels		Connected to	Transmit Channels	
Pin	Description		Pin	Description
1	Channel 1+	→	2	DIn 1+
51	Channel 1–	→	52	DIn 1-
3	Channel 2+	→	4	DIn 2+
53	Channel 2–	→	54	DIn 2-
5	Channel 3+	→	6	DIn 3+
55	Channel 3–	→	56	DIn 3-
7	Channel 4+	→	8	DIn 4+
57	Channel 4–	→	58	DIn 4-
9	Channel 5+	→	10	DIn 5+
59	Channel 5–	→	60	DIn 5-
11	Channel 6+	→	12	DIn 6+
61	Channel 6–	→	62	DIn 6-
13	Channel 7+	→	14	DIn 7+
63	Channel 7–	→	64	DIn 7-
15	Channel 8+	→	16	DIn 8+
65	Channel 8–	→	66	DIn 8-
17	Channel 9+	→	18	DIn 9+
67	Channel 9-	→	68	DIn 9-

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Receive Channels		Connected to	Transmit Channels	
Pin	Description		Pin	Description
19	Channel 10+	→	20	DIn 10+
69	Channel 10-	→	70	DIn 10-
21	Channel 11+	→	22	DIn 11+
71	Channel 11-	→	72	DIn 11-
23	Channel 12+	→	24	DIn 12+
73	Channel 12-	→	74	DIn 12-
25	Channel 13+	→	26	DIn 13+
75	Channel 13-	→	76	DIn 13-
27	Channel 14+	→	28	DIn 14+
77	Channel 14-	→	78	DIn 14-
29	Channel 15+	→	30	DIn 15+
79	Channel 15-	→	80	DIn 15-
31	Channel 16+	→	32	DIn 16+
81	Channel 16-	→	82	DIn 16-
34	XTRG1- A	→	35	XTRG2- A
34	XTRG1- A	→	43	IRIG Input
36	XTRG3- A	→	37	XTRG4- A
38	XTRG1- B	→	39	XTRG2- B
40	XTRG3- B	→	41	XTRG4- B

Note: Din refers to special dedicated inputs currently utilized only for external loop-back testing.

9.2.10 Part Numbers and Ordering Instructions

Cross Reference: Part numbers for the connectors are listed in Table 9.1.1 on page 53.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.3 Operational Specifications

The information in this section presents the operational specifications for the A429 PCI2-8/PCI2-16 cards. The following topics are covered:

- Power
- Temperature
- Shock
- MTBF
- Hardware Reset

9.3.1 Power

The power requirements for the PCI2-8/PCI2-16 cards are listed in Table 9.3.1.

Table 9.3.1: PCI2-8/PCI2-16 Power Requirements

Supply (volts)	Typical Idle Current (milliamps)	Maximum Current[a] (milliamps)
+5	730	800
+12	130	520
–12	90	470

Notes:
[a]For the maximum current, each channel output is loaded with 20 receiver loads, and each receiver load is assumed to be 8 kΩ.

9.3.2 Temperature

The PCI2-8/PCI2-16 cards operating and storage temperature specifications are listed in Table 9.3.2.

Table 9.3.2: PCI2-8/PCI2-16 Temperature Specifications

Type of Card	Operating	Storage
Commercial	0° to +60° Celsius	–65° to +150° Celsius
Industrial	N/A	N/A

9.3.3 Shock

Conformal coating is available upon request.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.3.4 MTBF

The mean time between failures for the PCI2-8/PCI2-16 cards are listed in Table 9.3.3.

Table 9.3.3: PCI2-8/PCI2-16 Mean Time Between Failures

Type of Card	MTBF*
Commercial	62,361 hours
Industrial	N/A

* The MTBF is calculated using MIL-HDBK-217F, Parts Count Method - Ground Benign Environment.

9.3.5 Hardware Reset

If the hardware reset button on the host system is pressed, the CSR is reset and firmware execution is halted. At this point, memory is still intact and may be accessed. After a hardware reset, the firmware must be restarted and memory will be cleared at this time.

Cross Reference: See Section 10.2 for a description of the CSR.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10: Card Information

This chapter provides card information for the A429 PCI2-8/PCI2-16 cards on memory organization, hardware control registers, and downloading/starting the firmware. The following topics are covered:

- Memory Organization
- Hardware Control Registers
- A429 Firmware Download and Startup Instructions

10.1 Memory Organization

This section describes the memory organization for the PCI2-8/PCI2-16 cards. The following topics are covered:

- Memory Map
- Device Window Select Bits

10.1.1 Memory Map

The A429 application program controls key segments of main memory containing the program pointer tables, and the receiver/transmitter channel control block for each channel. Each channel contains these elements in separate areas of main memory. Figure 10.1.1 illustrates the A429 memory map and the areas reserved for various functions.

The memory map for each of the two devices (Device 1 and Device 2) of the PCI2-8/PCI2-16 have the same structure.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

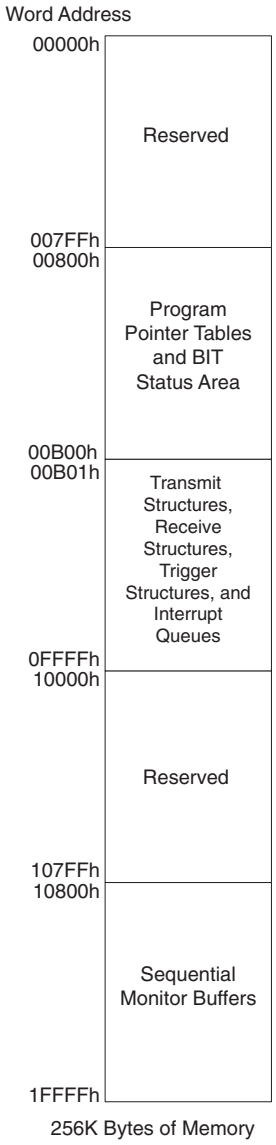

Figure 10.1.1: A429 Memory Map

Separate control blocks for each of the eight channels permit the A429 device to operate each channel simultaneously. The transmit and receive registers for a channel are located at offsets from the base address of that channel's control block. Channel control blocks start at 900h and have a length of 20h. Therefore, the control table for channel 1 occupies 900h to 91Fh, the control table for channel 2 occupies 920h to 93Fh, and so forth.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Cross Reference: The pointer table is discussed in the ARINC User's Manual and the hardware control registers are detailed in the next section. Module startup and test functions are detailed in "Running the Built-in Tests" in the ARINC User's Manual, and data structure control for Receive tables, Transmit command blocks, Sequential Monitor, and Interrupt functions are detailed in their respective subsections in the ARINC User's Manual.

10.1.2 Device Window Select Bits

The A429-PCI2-8/PCI2-16 use a flat memory organization.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10.2 Hardware Control Registers

Table 10.2.1 lists the hardware control registers. Detailed discussions for each register follow the table.

Table 10.2.1: Hardware Control Registers

Name	Word Addr Byte Addr (in hex)	Description
CSR	40000 80000	Control/Status Registers for Devices 1 and 2, respectively. Theses are key registers for proper initialization and operation of the A429 device.

10.2.1 PCI2-8/16

This subsection presents bit settings for the CSR1 (Table 10.2.2) and CSR2 (Table 10.2.3) hardware control register for the PCI2-8/PCI2-16 cards.

Table 10.2.2: PCI2-8/PCI2-16 Device 1 Control/Status Register (CSR 1)

Bit	Function*	Description
0	Run	0=DSP (Firmware) stop 1=DSP (Firmware) run
1	DSP Startup Mode	0=Load Firmware from RAM buffer 1=Load Firmware from FLASH memory
2	PLD Configuration	Altera 10KE Configure
3	PCI Interrupt Enable	0=Don't pass interrupts through to PCI bus 1=Pass interrupts through to PCI bus
4	PLD Clock	Write=10KE Configuration Clock Also used to Transfer Host Interface From 10KE to 7064 Read = 10KE Configuration Done
5	PLD Data	Write=10KE Configuration Data Read = Auto boot Jumper Enabled
6	Reserved	Write = Transfer Host Interface From 7064 to 10KE (Only valid once after an Altera configuration) Read = zero
7	Device 1 Interrupt	Read = Device 1 Interrupt Pending Write = Clear Device 1 Interrupt

* Except where otherwise noted, the host has both read and write access to the CSR bits.
ro = Read only access; wo = Write only access

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 10.2.3: PCI2-16 Device 2 Control/Status Register (CSR 2)

Bit	Function*	Description
0	Run	0=DSP (Firmware) stop 1=DSP (Firmware) run
1	DSP Startup Mode	0=Load Firmware from RAM buffer 1=Load Firmware from FLASH memory
2	PLD Configuration	Altera 10KE Configure
3	PCI Interrupt Enable	0=Don't pass interrupts through to PCI bus 1=Pass interrupts through to PCI bus
4	PLD Clock	Write=10KE Configuration Clock Also used to Transfer Host Interface From 10KE to 7064 Read = 10KE Configuration Done
5	PLD Data	Write=10KE Configuration Data Read = Auto boot Jumper Enabled
6	Device 1 Interrupt Reserved Usage	Read = Device 1 Interrupt Pending Write = Clear Device 1 Interrupt Transfer Device 2 Host Interface From 7064 to 10KE (Only valid once after an Altera configuration)
7	Device 1 Interrupt	Read = Device 2 Interrupt Pending Write = Clear Device 2 Interrupt

* Except where otherwise noted, the host has both read and write access to the CSR bits.
ro = Read only access; wo = Write only access

Note: The reserved bits are used only for configuring Altera FPGA's and cannot be written using the `sbs_put_csr()` routine.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10.3 A429 Firmware Download and Startup Instructions

This section describes downloading the firmware and the startup instructions for the A429-PCI2-8/PCI2-16 cards. The following topics are covered:

- Firmware File Format
- Downloading the PLD and Firmware Files
- Downloading the Firmware from Flash
- Starting the Firmware
- Reprogramming Flash Memory

10.3.1 Firmware File Format

A429 devices require all firmware code to be downloaded prior to initializing application data structures. One ASCII file contains all the firmware code.

The data in the download file is structured as 16-bit words. The first 16 words make up the file header, containing product and version information. The 17th word in the file contains a word count value (N), for the first third of the data in the file.

Figure 10.3.1 shows the firmware file format for all A429 devices except the PCI-8 with IRIG, and the PCM2. This format (the DSP file and all FPGA files) can fit onto A429 PC memory. After these files are downloaded on A429 memory, the DSP parses the file and downloads the correct channel configuration.

Cross Reference: See *Section 10.3.2: Downloading the PLD and Firmware Files* on page 73 for more information.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

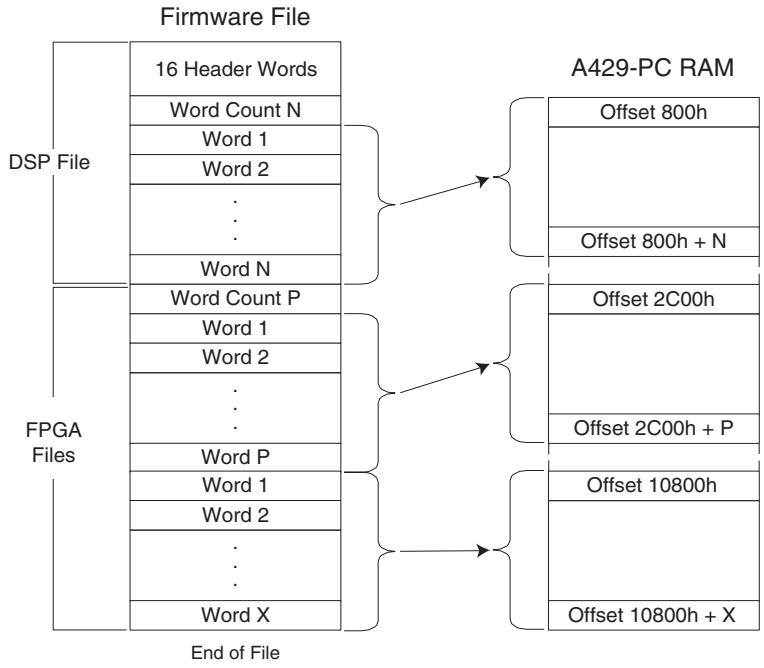

Figure 10.3.1: Format of the Firmware File for All A429 Devices Except PCI-8 with IRIG

Note: For PCI2-8/PCI2-16, the FPGA file loads into RAM beginning from offset 02C00h to the end of the firmware file.

10.3.2 Downloading the PLD and Firmware Files

The PCI2-8/PCI2-16 requires the PLD file to be downloaded prior to the firmware file. The Firmware file and PLD file are contained in a single file, which is in ASCII format (ex. *F082xx.dat*).

Downloading the PLD Data

Use the PLD download Register (I/O Port 0) to download the PLD data to the PCI2-8/PCI2-16:

1. Set the PLD download control by setting bit 4 (PLD Configuration Clock Bit). Wait approximately 1 millisecond then clear bit 4.
2. Reset the PLD by setting bit 2 (PLD Configuration Bit). Wait approximately 1 millisecond to allow the PLD to reset itself.
3. Clear bit 2 to begin downloading
4. Open the firmware file (ex. *F082xx.dat*)
5. Using the I/O Control/Status Register, verify that the internal processor is not

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

running.

6. Skip the DSP file and read one word passed word X (refer to firmware file format).

7. Read FPGA Word 1 (16 bits), this is the first word to be downloaded.

Note: Each value is downloaded one bit at a time, beginning with the least significant bit. Three write instructions must be performed to download each bit. The PLD download register consists of four bits:

Bit 2 – PLD Configuration Bit

Bit 4 – PLD Configuration Clock Bit, is also used to transfer host interface from 10KE to 7064

Bit 5 - PLD Configuration Data Bit

Bit 6 - Transfer host interface from 7064 to 10KE

8. Write a 16-bit value to the PLD Download Register as follows; Starting with least significant bit, determine if a **1** or a **0**. Bit 2 is always cleared.

If 0	If 1
Clear bit 4	Set bit 5 to a **1**
Set bit 4 to a **1**	Set bit 5, and bit 4, to a **1**
Clear bit 4	Set bit 5 to a **1**, and clear bit 4.

9. Repeat Step 8 for all 16 bits.

10. Read the next 16 bit word and repeat Step 8 and Step 9.

11. Continue reading 16 bit words from the firmware file and writing bits to the PLD download register until the end of the file is reached.

12. Wait approximately 1 millisecond then toggle the bit 4 (PLD Configuration Clock Bit) 10 times by setting and clearing bit 4.

13. Set PLD Control by setting bit 6 (Transfer Interface). Wait approximately 1 millisecond, then clear bit 6.

Note: After the PLD is downloaded, the firmware code can be loaded.

Downloading the Firmware Code

To download the firmware code to the A429 device, complete the following steps:

1. Open the firmware code file (text mode). Figure 10.3.1 on page 71 illustrates the format of the firmware file.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Read the run bit in the CSR (bit 0 for PCI2-8/PCI2-16) of the I/O Control Register (CSR) to verify that the internal processor is not running. (If required, clear this bit to halt processing.)

Cross Reference: See the *Hardware Control Registers* section on page 68 for more information on the CSR.

3. Write a data value of **000Ah** to offset 0FFFFh.
4. Read and skip the first sixteen words in the firmware file.
5. Read the next word. This is the word count, **N**.
6. Read the next word from the file and write the word to memory, starting at offset 00800h.
7. Continue reading the file, writing the data, and incrementing the address until **N** words have been read and written.
8. After the **N**th word is processed, read the next word. This is the word count, **P**.
9. Read word **P** from the file and write the word to memory starting at offset 2C00h.
10. Continue reading the file, writing the data, and incrementing the address until the end of the file has been reached.

10.3.3 Downloading the Firmware from Flash

After powering-up or resetting the PCI2-8/PCI2-16 module, complete the following steps to start up the module using the flash memory:

1. Write 0002h to the CSR (offset 0) to reset the hardware.
2. Write 000Ah to offset 0FFFFh.
3. Write FFFFh to the BIT Status register (offset 83Bh).
4. Write 0003h to the CSR to start the firmware.
5. Read the BIT Status register and wait for the value to equal 0000h, indicating that the power-up tests have completed.
6. Read the BIT total error count (offset 83Ch).

Note: The value will be nonzero if errors were detected. If a nonzero value occurs, contact SBS Technologies.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

After you complete this procedure, the PCI2-8/PCI2-16 is in BIT Mode awaiting a command. Either select built-in tests to be performed or initialize the board for A429 operations.

10.3.4 Starting the Firmware

After powering-up or resetting the A429 module, first download the PLD, then download the firmware file per the software download instructions in Subsection 10.3.2. Upon completion of the download, perform the following procedure to start up the A429.

1. Write a **0x0001** to the CSR to start the A429 Firmware.
2. Read the FPGA download Status Register (offset 812h).

   There are three possible states:

   1) A value of **C0DEh** indicates that the FPGA downloaded successfully.

   2) A value of **BADDh** indicates that the FPGA download failed.

   3) A value of **0x0** indicates the firmware has not started.

Note: If 2) or 3) occurred, contact SBS Technologies

3. Read the Configuration Status Register (offset 802h) and wait for the value to equal FFFFh, indicating that the power-up tests have completed.
4. Read the BIT total error count (offset 83Ch)

Note: The value will be non-zero if errors were detected. If a non-zero value occurs, contact SBS Technologies.

Table 10.3.1: ENCDEC Configuration Register

16-Bit Register Offset (Hex)	Register Description
800	Channel Configuration Register
801	Dedicated Receive Channel Configuration Register
802	Configuration Status Register
803	Total Number of Channels
812	FPGA Download Status

After you complete this procedure, the A429 is in BIT mode awaiting a command. Either select BIT tests to be performed or initialize the board for ARINC 429 Application Mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10.3.5 Reprogramming Flash Memory

The flash memory on the PCI2-8/PCI2-16 may be reprogrammed, providing firmware updates at your site without the need for PROM replacements. The procedure is similar to the method of module startup previously described in Subsection 10.3.2 or Subsection 10.3.3. Complete the following steps:

1. Perform a Software Download with the new code to be programmed (refer to firmware download procedures).
2. Perform a Module Startup - Data RAM Mode. This will verify that the code is loaded into the board memory and able to run before reprogramming the FLASH.
3. Perform the Software Download with the new code to be programmed.
4. Perform a Module Startup - Flash Mode using the following steps:
    a. Write **0002h** to the CSR (offset 20000h for the PCI) to reset the hardware.
    b. Write **C0DEh** to Program Command Register 1 (offset 0FC00h).
    c. Write **1234h** to Program Command Register 2 (offset 0FC01h).
    d. Write **FFFFh** to the BIT Status Register (offset 83Bh).
    e. Read the BIT Status Register and wait for the value to equal 0000h, indicating that the power-up tests have completed.
    f. Read both Program Command Registers (offsets 0FC00h and 0FC01h).

Note: The values will be non-zero if flash programming errors were detected.

These procedures reprograms the flash memory with the new code. The new code restarts the device. After you complete this procedure, the device is in BIT mode awaiting a command.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group

Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment.

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- CONSIGNMENT

SERVICE CENTER REPAIRS
Experienced engineers and technicians on staff at our full-service, in-house repair center

INSTRAVIEW REMOTE INSPECTION
Remotely inspect equipment before purchasing with our interactive website at ***www.instraview.com*** ↗

WE BUY USED EQUIPMENT!
Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins!
www.artisantg.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?
Visit us on the web at ***www.artisantg.com*** ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation!

Contact us: (888) 88-SOURCE | sales@artisantg.com | 101 E. Mercury Drive, Champaign IL 61822